


Back Wind Baffle Installation Instructions

Galvanized, powder coated back wind baffles


The back wind baffle is designed to be placed on the intake side (back) of Samsung condensing units. For outdoor unit compatibility details, please refer to supporting technical documents at www.SamsungHVAC.com

INSTALLATION

1. This baffle is used for various condensing unit models. Before installing the wind baffle, inspect inside the condensing unit to verify proximity of the condenser coil and wires to the sheet metal cabinet. **CARE MUST BE TAKEN TO NOT PUNCTURE THE COIL OR DAMAGE WIRES WITH WIND BAFFLE SCREWS.** Also take care not to penetrate internal chassis partitions.
2. Remove the outdoor air temperature sensor from the coil guard mounting clip. Remove the factory coil guard from the back of the unit and discard. Save the screws for later use.
3. Align the baffle with the back of the condensing unit. Carefully place the baffle against the outdoor unit aligning the baffle screw holes with the screw holes from the coil guard removed in step 2.

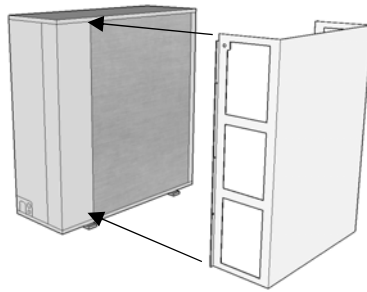

4. Carefully reinstall the saved screws from step 2 on the left and right sides of the baffle.

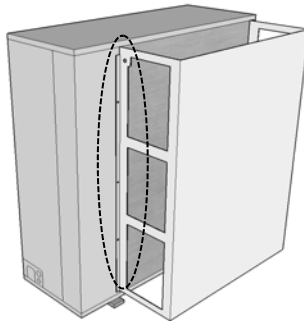

5. After inspecting inside the unit for condenser coil and wire locations, install provided installation screws as needed into the extra mounting holes to better secure the wind baffle to the condensing unit. Take extra care on the left side of the baffle.
6. Route the outdoor air temperature sensor through the sensor hole noted below. Make sure the sensor tube is pointing downward to prevent water entry into the tube.

